



## LED TV

### دليل المستخدم

الموديل:

32D3 ▲

43D3 ▲

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز ،  
واحتفظ به للرجوع إليه مستقبلا

هذه التصاميم ومواصفات عرضة للتغيير بهدف إدخال تحسينات عليها  
وذلك دون إشعار مسبق

ISO9001 CB



## LED TV

### User's Manual

Model:

▲ 32D3

▲ 43D3

Please read this manual carefully before operating your set.  
Retain it for future reference.

Designs and specifications are subject to change for improvement  
without prior notice.

ISO9001 CB





Model: 32D3  
43D3

## Table of Contents

### Chapter 1: Introduction

<b>Precautions</b> .....	2
Product.....	2
Power and Plug.....	2
Power Cord and Signal Cable.....	2
Use Environment.....	2
Cleaning.....	2
Hanging the TV Set on the Wall.....	2
<b>Buttons on the TV</b> .....	3
<b>Sockets</b> .....	4
<b>Remote Control Functions</b> .....	5

### Chapter 2: General Operation

<b>Switching on</b> .....	6
<b>Switching off</b> .....	6
<b>Menu Function</b> .....	7
SOURCE.....	7
SETTING.....	7
PICTURE.....	7
SOUND.....	7
TIME.....	8
SET UP.....	8
CHANNEL.....	9

### Chapter 3: Advanced Functions

Multimedia .....	10
Photo .....	10
Music .....	10
Movie .....	10
EPG .....	10
Programme Guide .....	11
PVR (Personal Video Record).....	11
Scheduled List .....	11

<b>Attention and Frequently Asked Questions</b> .....	11
Attention.....	11
Frequently Asked Questions.....	11

### Chapter 4: Other Information

<b>Troubleshooting</b> .....	12
<b>Base Installation</b> .....	12

### Precautions

Read all of the instructions before operating the set.  
Keep these instructions well for future use.

### Product

- Do not block or cover the ventilation openings on the back cover
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage . There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

### Power and Plug

- Unplug the set under the following conditions:
  - If the set will not be used for a long period of time.
  - If the power cord or the power outlet/plug is damaged.
  - Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
  - If the set is subject to impact or has been dropped to have the cabinet damaged.
- Where the mains plug or an appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.  
(\* Where an all-pole mains switch is used as the disconnect device, the switch shall remain readily operable.)

### Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

### Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

### Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

### Hanging the TV Set on the Wall

#### Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

#### Note:

**Graphics contained within this publication are presentation only.**  
**WARNING: the batteries should not be exposed to excessive heat such as sunshine, fire or the like.**

### Buttons on the TV

Take a certain model for an example:



#### ⏻ button

Turns the TV on or standby.

## Introduction

### Sockets


Note: The location and names of the sockets on the TV may vary according to TV model, and not all sockets available on all models.



#### USB socket (input)


This socket can be used to connect a USB device.

Note: The number of USB sockets on the TV may vary according to TV model.



#### SPDIF socket (output)

Use a digital coaxial cable to connect your TV to a compatible audio receiver.

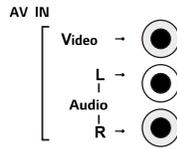

#### Video + AV RCA audio sockets (input)

The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles.

Note: You must connect an Audio/Video adapter cable with three color jacks to this adapter jack. The number of AV IN sockets on the TV may vary according to TV model.



#### AUDIO OUT socket (output)

Use an RCA audio cable to connect your TV to a compatible audio receiver.



#### ANTENNA IN socket (input)

This socket can be used to connect the outside aerial or cable network.



#### HDMI sockets (input)

The HDMI (High-Definition Multimedia Interface) socket can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug

cable.

Note: The number of HDMI sockets on the TV may vary according to TV model.

## Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.



**MUTE** (MUTE) Reduce the TV's volume to its minimum level. Press again to restore the volume.

**(On/Off button)** Turns the TV on or off.

**09-** (numeric buttons) Enters channel numbers.

**DISCOVER** Press DISCOVER button to choose Enjoy Music, Football Mode, Sleep Timer, Soundbar functions.

**EPG** To toggle the Electronic Program Guide on or off under DTV source.

**VOL +/-** Increase or decreases the TV's volume.

**CH +/-** Scan up or down through the current channel list.

**Info** Display the status information.

**Source** Press to select signal source.

**PICTURE** Selects picture mode.

**SOUND** Selects sound mode.

**Menu** Bring up the menu system.

**Exit** Exits the menu system.

**▲▼◀▶** (up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls.

**OK** Confirm your selection.

**Zoom +/-** Press to select the desired screen format. (In USB mode, it is unavailable.)

**REC** To record programs under DTV source.

**RETURN** Return you to the previous channel in TV mode.

**TEXT** Teletext.

**SUBTITLE** Press to display the Subtitle Language menu.

**LIST** Short press to enter the Channel List. And long press to enter the Fav list.

**DTV** In DTV mode, press it to display program information, In the other sources, press it to back DTV.

**Red button** In corresponding mode, press it to enter the right function as hint.

**Green button** In corresponding mode, press it to enter the right function as hint. (In DTV mode, this button is Time Shift button, pause the program to activate Time Shift function when you are watching.)

**Yellow button** In corresponding mode, press it to enter the right function as hint. (AD Press to select AD Switch on or off.)

**Blue button** In corresponding mode, press it to enter the right function as hint. (In USB and DTV mode, press to select sound track mode)

### Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two AAA batteries in the remote control.


Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable FIRST to the television, THEN to a mains socket. (Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)

Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

Note: The figures are for representation only. The location of the power socket at the back of the television might differ depending on the model.



3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.

The aerial socket (75 OHM - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted.

4. When powered on, the TV will be turned on directly or be in standby.


If the power indicator lights up, the TV set is in standby mode. Press the button on the remote control or on the TV set to turn on the TV.

### Switching off

- To put the TV set into standby mode, press the button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.  
Note: For some models, press the power button to switch off the TV set.


### Menu Function

The following instructions will introduce how to access and operate the main menu of the TV. Please note that some function might be unavailable in certain input source.

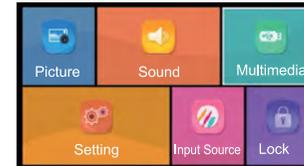

#### Source

Display the menu by pressing the Menu button. Press the up,down,left or right direction button to select the Source icon and press the OK button to enter the Source menu.

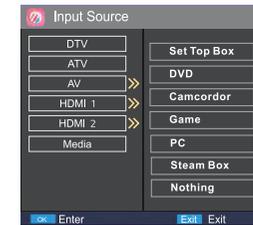

1. Press the up or down direction button to select your desired source.  
(Note: The available source might differ depending on the model.)
2. Press the OK button to confirm the selection.

#### Setting

Display the menu by pressing the Menu button. Press the up,down,left or right direction button to select the Setting icon and press the OK button to enter the Setting menu. Press the left or right direction button to select: Picture, Sound, Time, Setup, Channel and press the "7906" enter Hotel Mode menu.

#### Picture



**Note:** Some options may be not available for certain signal sources.

**Picture Mode:** Use the right direction or OK button to enter the selectable options, then press the up or down direction button to scroll through the picture preset settings: Vivid, Standard, Mild or User, and press OK to confirm.

**Contrast:** Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

**Brightness:** Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

**Colour:** Adjust the saturation of the color based on your own like.

**Tint:** Use in compensating color changed with the transmission in the NTSC code.

**Sharpness:** Adjust the peaking in the detail of the picture.

**Color Temp:** Adjusts the color temperature of the picture. options include Cold, Normal and Warm. Cold is for a more blue palette of picture colors; Warm is for a more red palette of picture colors; Normal is between the two.

**Noise Reduction:** options include: Off, Low, Middle, High and default.

**HDMI MODE:** This function is only available in HDMI mode. options include: Auto, Video, PC.

**Backlight:** adjusts the backlight level which affects the overly brilliance of the picture.

#### Sound



The SOUND menu allows you to adjust each option for your listening pleasure.

**Sound Mode:** Options include Standard, Music, Movie, Sports and User.

**Treble:** Press or OK to adjust the Treble of the sound.

**Bass:** Press or OK to adjust the Bass of the sound.

**Balance:** Press or OK to enter and use balance the sound between the left and right speakers.

**Auto Volume Level:** Options include Off and On.

**Surround Sound:** Options include off, TruSurround, SRS TruSurround XT.

## General Operation

**SPDIF Mode:** Options include Auto and PCM

**Enjoy Music:** Press ► or OK, Press ▲/▼ to select On/Off.

**AD Switch:** Options include On and Off.

**AD Volume:** Press ► or OK, Press ▲/▼ to select On/Off.

### Time



The Time menu allows you to set the sleep timer and turn on time.

**Clock:** This option can setting current time.

**Off Time:** Press OK to select in and then press ◀/▶ switch between off, Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun and Sun. If you select Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun and Sun, then use ▲/▼ and ◀/▶ to set off time just as the clock setting menu.

**On Time :** Use ◀/▶ to select Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun and Sun. If you select Once Everyday, Mon-Fri, Mon-Sat, Sat-Sun and Sun, you should set a time period after which the TV automatically switches to on at Time below this item. Highlight Time, press OK to enter and then use ▲/▼/◀/▶ and OK buttons to change the time.

**Time Zone:** selects the time zone you stay.

**Sleep Timer:** sets a period of time after which the TV set goes into standby mode, use the up or down direction button to set the period. To disable this function, select Off.

**Auto Standby:** options include off, 3H, 4H, 5H, the TV will enter standby mode at the specific time that you set. Note: it turns off automatically without signal in 10 minute.

**OSD Timer:** Chooses the on-screen display timer. The options include 5s, 15s, 30s.

### Setup

**Language:** Select an OSD menu language can be displayed. Default English is selected as menu language. Press ▲/▼/◀/▶ button to select OSD language.



**TT Language:** Press ▲/▼ button to select TT Language, then press the OK or right direction button to enter submenu. Press ▲/▼ button to select. (West, East, Russian, Arabic, Farsi)

**Audio Language:** Press ▲/▼ button to select Audio Language press the OK or right direction button to enter sub-menu. Press ▲/▼/◀/▶ button to select. (Only in DTV mode)

**Hearing Impaired:** Press ▲/▼ button to select Hearing Impaired, then press the OK or right direction button to select On or Off. (It is only available in DTV mode.)

**PVR File System:** Press ▲/▼ button to select PVR File System, then press the OK or right direction button to enter sub-menu. Press ▲/▼ button to select Check PVR File System. Then press OK button to enter and it will check the USB speed.

**Aspect Ratio:** Press ▲/▼ button to select Aspect Ratio, then press the OK or right direction button to enter submenu. Press ▲/▼ button to select Auto, 4:3, 16:9, Zoom1, Zoom2.

**Blue Screen:** Press ▲/▼ button to select Blue Screen, then press the ◀/▶ button to select On/Off.

**First time Installation:** Press ▲/▼ button to select First time Installation then press the OK button to enter.

**Reset:** Press ▲/▼ button to select Reset, then press the OK button to enter

**Software Update(USB):** Update the software by USB with downloading software.

**Environment:** Options include Shop Mode and Home Mode.

**HDMI auto switch:** Options include Auto, Manual and Off

**Soundbar ready:** Press ► or OK, Press ◀/▶ to select On/Off.

**Epop:** Options include Off and On.

## General Operation

### LOCK

This function allows you to effectively stop anyone without the correct password from watching TV. When you select the System Lock is On, the menu is changed, the options include System Lock, Set Password, Channel Lock, Parental Guidance, Key Lock, Hotel Mode.

**Set Password:** sets a new password for operating TV. The default password is "0000".


**Channel Lock:** lock the program you set.

Note: If you forget the password, enter 4711 to override any existing codes.

**Parental Guidance:** limits the age watching TV. Options include Off, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18. Note: It is only available in digital mode.

**Key Lock:** When Key Lock's status is on, you can't use the Key panel button.

### CHANNEL

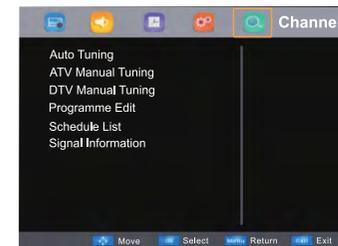

**Auto Tuning:** searches and stores the active channel automatically

**ATV Manual Tuning:** manually searches and stores the channel in analog mode that have not been stored after automatic tuning.


**DTV Manual Tuning:** manually searches and stores the channel in DTV Manual Tuning that have not been stored after automatic tuning.

**Programme Edit:** delete, move or skip a channel for DTV, delete, rename, move or skip a channel for ATV.

**Signal Information:** Press ▲/▼ button to select Signal Information, then press OK button to see the detail information about the signal. Only available when there is signal in DTV and Satellite.

### Multimedia

Connect a USB device to a USB socket and display the main menu by pressing the Menu button, then select the Multimedia icon and press OK button enter Multimedia.

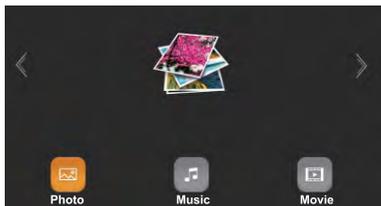

#### Notes:

In Multimedia menu, you can press the left or right direction button to toggle among Photo, Music, Movie, then press the OK button to confirm.

The short keys of USB include: the up, down, left, right direction buttons and OK buttons.

In USB state, if no USB device connected, the USB interface will be displayed

### Photo

1. Press LEFT/RIGHT buttons to select PHOTO and press OK button to enter the USB content browser.
2. Use the UP/DOWN/LEFT/RIGHT buttons to select a subfolder. Press OK button to enter. Use the UP/DOWN/LEFT/RIGHT buttons to select a photo and press OK button to show it.
3. Press OK/Info button to display the control menu. The menu options include Play/Pause, Prev., Next, Music (on/off), left, right, Info, zoom in, zoom out, Movie view.
4. Press OK button to confirm your setting. Press Info or EXIT button to exit the control menu.

### Music

1. Press LEFT/RIGHT buttons to select MUSIC and press OK button to enter the USB content browser.
2. Use the UP/DOWN/LEFT/RIGHT buttons to select a subfolder. Press OK button to enter. Use the UP/DOWN/LEFT/RIGHT buttons to select a music and press OK button to play it.
3. Press OK/Info button to display the control menu. The menu options include Play/Pause, Prev., Next, FB FF, Repeat mode, Playlist, Info.
4. Press OK button to confirm your setting. Press Info or EXIT button to exit the control menu.

### Movie


1. Press LEFT/RIGHT buttons to select MOVIE and press OK button to enter the USB content browser.
2. Use the UP/DOWN/LEFT/RIGHT buttons to select a subfolder. Press OK button to enter. Use the UP/DOWN/LEFT/RIGHT buttons to select a photo and press OK button to play it.
3. Press OK/Info button to display the control menu. The menu options include Play/Pause, Prev., Next, FB, FF, Stop, Repeat mode, Playlist, Info.
4. Press OK button to confirm your setting. Press Info or EXIT button to exit the control menu.

### EPG

Before use the following three functions, connect a USB device to the TV and keep in digital mode. For those functions, you might operate them following the directions on screen.

Display the menu by pressing the Menu button. Press the up, down, left or right direction button to select the EPG icon and press the OK button to enter the PROGRAMME GUIDE menu.

(Note: Press EPG button in the remote is quick access to the PROGRAMME GUIDE menu.)

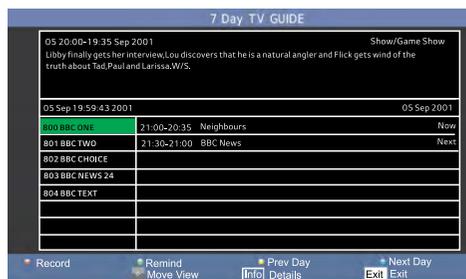

NOTE: The PROGRAMME GUIDE's content is based on signal information the pictures is only for reference Before you plug the USB device to TV, make sure you have backed up the date in the device to avoid the unusual performance make your important data lost. Do not unplug the USB device when the system is reading a file or transmitting data, otherwise the system or the device may be damaged.

### Programme Guide

Using this function you may know the following programme

1. Press UP/DOWN buttons to move the highlight to Channel or Time item.
2. Press LEFT/RIGHT buttons to select Channel or Time item

Select Channel, and the programme information on both the day and the next day will appear.

Select Time, and the programme information in one week will appear.

### Reminder Setting

1. In SCHEDULE LIST, menu, press Yellow but ton to enter Reminder Setting menu, use UP/DOWN/LEFT/RIGHT buttons to select and adjust it. Then press OK button to save.
2. Near the time that you set, it will remind you the channel will be switched automatically in 30 seconds.

### PVR (Personal Video)

Allows you to record your favorite programme so that you will not miss favorite part even if you go out.

If you go out, you may set the time that programme will play, then add it in the schedule list, at the time, it will start to record automatically.

### Record the Programme

1. Press EPG button to display the digital programme guide.
  2. Use UP/DOWN buttons to select the CHANNEL that you want to RECORD, then press LEFT/RIGHT buttons to Programme EVENT.
  3. Press red button to set record and press green button to set remind.
  4. In recording, the tool bar shows to indicate the recording progress. Press STOP button to stop recording manually.
  5. To watch the recorded programs, go to USB/Movie and find the folder PVR.
- If the recording duration finishes, it will stop automatically. During recording, only PLAY and PAUSE in directions on screen are working.

### Short-cut for PVR

Press REC button on remote control to record the programme directly.

### Schedule List

Allows you to perform scheduled recording and reminding.

1. According to the following steps, you can add new items in the Schedule List. Press yellow button to enter the submenu "Schedule setup". Press "UP/DOWN" buttons to select items and use "LEFT/RIGHT" buttons to adjust them. Press "OK" to save your selection.
2. Enter the schedule, press RED button can delete the list that you select. Press RED button can delete the list that you select. Press BLUE button can edit the list that you select.
3. The TV will record the programme at the set time automatically, A prompt appears during the last seconds before recording.

### Attention and Frequently Asked Questions

#### Attention:

1. Some non-standard mobile storage device may not be recognized. Please change to use the standard device.
2. This system supports the following file formats:  
Picture format: JPEG/BMP/PNG/GIF  
Video format: H.264、MPEG2、MPEG4、VC1、VP9  
Audio format: MP3/AC3/WMA

**Note:** For coding files, there are many kinds nonstandard coding method, so this system can not be guaranteed to support the file formats using any coding method.

#### Frequently Asked Questions:

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:

-The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;

-The format of file is not matched or the file is harmed.

**Note:** The code rate this system supports does not exceed 20Mbps.

2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc.
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
6. Connecting two USB hard disk devices simultaneously can cause to slow the speed of reading or other problems, suggests to connect tow U disk or one USB hard disk and one U-disk simultaneously.
7. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
8. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage. -The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;

**Troubleshooting**

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

**No picture, no sound**

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

**No color**

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

**Remote control does not work**

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

**No picture, normal sound**

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

**Normal picture, no sound**

1. Press the **Vol+** button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

**Unorderly ripples on the picture**

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

**Blank screen in VGA mode**

Perhaps the TV can not recognize the resolution set by the PC. Suggest to change to the best resolution or other standard resolutions of the Windows system.

**Snowy dots and interference**

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

**Ignition**


Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

**Ghost**

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

**Radio frequency interference**

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source. Base Installation.

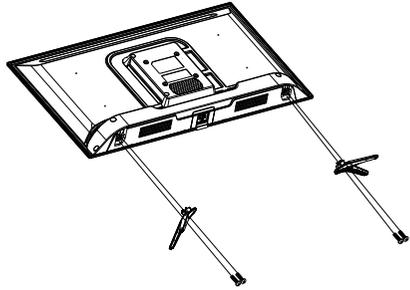**Base Installation**

To fix the double support base on the unit by screws, the installation is completed.

**استكشاف الأخطاء وإصلاحها**

يمكن إصلاح معظم الأخطاء التي تواجهها بالتلفزيون الخاص بك عن طريق الرجوع إلى قائمة استكشاف الأخطاء وإصلاحها التالية

**بدون صورة وبدون صوت**

- 1- تأكد من عمل الصمام الكهربائي أو قاطع الدائرة الكهربائية.
- 2- قم بتوصيل جهاز كهربائي آخر بالمنفذ للتأكد من أنه يعمل أو قيد التشغيل.
- 3- للاتصال ضعيف بين قابس الطاقة والمنفذ.
- 4- تحقق من مصدر الإشارة.

**لا توجد ألوان**

- 1- قم بتغيير نظام الألوان.
- 2- قم بضبط التشبع اللوني.
- 3- جرب قناة أخرى. قد يتم استقبال برنامج الأبيض والأسود.

**وحدة التحكم عن بُعد لا تعمل**

- 1- استبدل البطاريات.
- 2- البطاريات غير مركبة بشكل صحيح.
- 3- مصدر الطاقة الأساسي غير متصل.

**لا توجد صورة، الصوت طبيعي**

- 1- اضبط السطوع والتباين.
- 2- قد يكون هناك فشل في البث.

**صورة طبيعية، لا يوجد صوت**

- 1- اضغط على الرمز "Vol+" لرفع الصوت.
- 2- مستوى الصوت مضبوط على وضع الكتم، اضغط على زر الكتم لاستعادة الصوت.
- 3- قم بتغيير نظام الصوت.
- 4- قد يكون هناك فشل في البث.

**موجات غير منظمة تظهر على الصورة**

عادة ما يحدث ذلك بسبب تداخل محلي مثل السيارات أو المصابيح أو مجففات الشعر. اضبط الهوائي للحد من التداخل.

**شاشة فارغة في وضع VGA**

ربما لا يستطيع التلفزيون التعرف على الدقة التي وضعها الكمبيوتر. اقترح التغيير إلى أفضل دقة أو دقة قياسية أخرى لنظام Windows.

**نقاط بيضاء وتداخل**

إذا كان الهوائي موضوع في منطقة هامشية بعيدة عن إشارة التلفاز مما يؤدي إلى ضعف الإشارة، قد تظهر النقاط على الصورة. إذا كانت الإشارة ضعيفة جداً، قد يكون من الضروري تركيب هوائي خاص لتحسين الاستقبال.

- 1- اضبط موضع واتجاه الهوائي الداخلي/الخارجي.
- 2- تحقق من توصيل الهوائي.
- 3- اضبط القناة.
- 4- جرب قناة أخرى. قد يكون هناك فشل في البث.

**الإشعال**


ظهور بقع سوداء أو خطوط أفقية، أو تهتز الصورة. يحدث ذلك عادة بسبب تداخل نظام الإشعال أو مصابيح النيون أو المثاقب الكهربائية أو أجهزة كهربائية أخرى.

**الصورة الشبحية**

تحدث الصورة الشبحية بسبب إشارات التلفاز التي تتخذ مسارين. أحدهم المسار المباشر والآخر يعكس من المباني الطويلة أو التلال أو الأجسام الأخرى. قد يؤدي تغيير اتجاه الهوائي أو موقعه إلى تحسين الاستقبال.

**تداخل الترددات اللاسلكية**


ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلل في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم بإزالته.

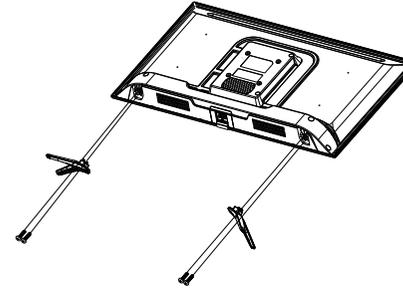**تركيب القاعدة**

بمجرد تثبيت قاعدة الدعم المضاعف على الوحدة بواسطة البراغي تكون قد انتهت من تركيب القاعدة.

الوسائط المتعددة

وضّل جهاز الـ USB بمنفذ الـ USB واعرض القائمة الرئيسية بالضغط على زر "Menu"، ثم حدد أيقونة "Multimedia" واضغط على الزر "OK" للدخول.

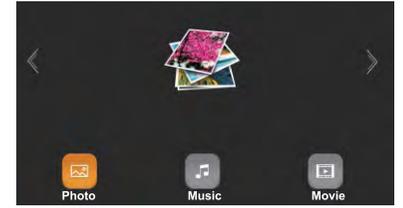

في قائمة الوسائط المتعددة "Multimedia"، يمكنك الضغط على زر الاتجاه "left" أو زر الاتجاه "right" للتبديل بين الصور والموسيقى والأفلام. ثم اضغط على الزر "OK" للتأكيد. والأفلام. ثم اضغط على الزمن اختصارات لوحة المفاتيح لـ USB: أزرار الاتجاهات "up" و"down" و"left" و"right" وزر "OK" للتأكيد.

في حالة الـ USB، سيتم عرض واجهة USB إذا لم يتم توصيل أي من أجهزة USB.

الصور

1- اضغط على الزر "LEFT" أو الزر "RIGHT" لتحديد "الصور" واضغط الزر "OK" للدخول إلى مستعرض محتوى الـ USB.  
2- اضغط على الزر "UP" أو "DOWN" أو "LEFT" أو "RIGHT" لتحديد المجلد الفرعي. اضغط على الزر "OK" للدخول. اضغط واضغط على الزر "OK" لعرضها.  
3- تتضمن خيارات القائمة "التشغيل" / "الإيقاف" و"السابقة" و"التالية" و"الموسيقى (تشغيل / إيقاف) و"اليسار" و"اليمين" و"التكبير" و"التصغير" وعرض.  
4- اضغط على الزر "OK" لتأكيد الإعدادات. اضغط على الزر "Info" أو الزر "EXIT" للخروج من قائمة التحكم.

الموسيقى

1- اضغط على الزر "LEFT" أو الزر "RIGHT" لتحديد مقطع الموسيقى واضغط على الزر "OK" للدخول لمستعرض محتوى الـ USB.  
2- اضغط على الزر "UP" أو "DOWN" أو "LEFT" أو "RIGHT" لتحديد المجلد الفرعي. اضغط على الزر "OK" للدخول. اضغط على الزر "UP" أو "DOWN" أو "LEFT" أو "RIGHT" لتحديد مقطع الموسيقى ثم اضغط على الزر "OK" لتشغيله.  
3- اضغط على الزر "OK" أو الزر "Info" لعرض قائمة التحكم. تتضمن خيارات القائمة "التوقيف" أو "التشغيل" و"السابقة" و"التالية" و"التراجع السريع" و"التقدم السريع" و"وضع التكرار" و"القائمة" و"المعلومات".  
4- اضغط على الزر "OK" لتأكيد الإعدادات. اضغط على الزر "Info" أو الزر "EXIT" للخروج من قائمة التحكم.

الأفلام

1- اضغط على الزر "LEFT" أو الزر "RIGHT" لتحديد "الأفلام" واضغط على الزر "OK" للدخول لمستعرض محتوى الـ USB.  
2- اضغط على الزر "UP" أو "DOWN" أو "LEFT" أو "RIGHT" لتحديد المجلد الفرعي. اضغط على الزر "OK" للدخول. اضغط على الزر "UP" أو "DOWN" أو "LEFT" أو "RIGHT" لتحديد الفيلم، ثم اضغط على الزر "موافق" لتشغيله.  
3- اضغط على الزر "OK" أو الزر "Info" لعرض قائمة التحكم. تتضمن خيارات القائمة "التوقيف" أو "التشغيل" و"السابقة" و"التالية" و"الرجوع السريع" و"التقدم السريع" و"وضع التكرار" و"القائمة" و"المعلومات".  
4- اضغط على الزر "OK" لتأكيد الإعدادات. اضغط على الزر "Info" أو "EXIT" للخروج من قائمة التحكم.

دليل البرامج الإلكترونية

قبل استخدام الوظائف الثلاث التلقائية، قم بتوصيل جهاز USB بالتلفزيون واضبط التلفزيون على الوضع الرقمي. يمكنك تشغيل هذه الوظائف باتباع التوجيهات الموضحة على الشاشة.

اعرض القائمة عن طريق الضغط على زر "Menu" اضغط على الزر "up" أو "down" أو "left" أو "right" لتحديد أيقونة دليل البرامج الإلكتروني ثم اضغط على الزر "ok" للدخول إلى قائمة دليل البرنامج.

(ملحوظة: بالضغط على الزر "EPG" في وحدة التحكم عن بعد يمكنك الوصول بسرعة إلى قائمة دليل البرنامج.)



**ملاحظة:** يعتمد محتوى دليل البرنامج على معلومات الإشارة، الصورة متوفرة كمرجع ليس إلا.

قبل أن تقوم بتوصيل جهاز USB بالتلفزيون، تأكد من عمل نسخة احتياطية من التاريخ في الجهاز لتجنب فقد بياناتك المهمة بسبب الأداء غير المعتاد. لا تتم، بفصل جهاز USB أثناء قراءة النظام، للملف أو إرسال البيانات، ولا وقد يتلف النظام، أو الجهاز.

دليل البرنامج

باستخدام هذه الوظيفة، يمكنك التعرف على البرنامج التالي.

1- اضغط على الزر "UP" أو "DOWN" لنقل التمييز بين عنصر القنوات وعنصر الوقت.

2- اضغط على الزر "LEFT" أو "RIGHT" لتحديد عنصر القناة أو الوقت.

عند تحديد القناة ستظهر معلومات البرامج التي سيتم بثها في اليوم الحالي واليوم التالي.

وعند تحديد الوقت ستظهر معلومات البرامج التي سيتم بثها خلال الأسبوع.

إعدادات التذكير

باستخدام هذه الوظيفة، لن تنسى أبداً البرامج التي ترغب في مشاهدتها.

1- في القائمة "قائمة الجدول الزمني" اضغط على الزر الأصفر للدخول إلى قائمة إعدادات التذكير. واستخدم الأزرار "UP" و"DOWN" و"LEFT" و"RIGHT" للتحديد والضغط. ثم اضغط على الزر "OK" للضغط.

2- ستدرك الوظيفة بتبديل القنوات تلقائياً في خلال 30 ثانية قبيل حلول الوقت الذي حددته.

PVR (سجل الفيديو الخاص)

تسمح لك هذه الوظيفة بتسجيل برنامجك المفضل حتى لا تفوت الجزء المفضل منه إذا اضطررت إلى الخروج.

إذا اضطررت إلى الخروج، يمكنك تحديد الوقت الذي سيبدأ فيه البرنامج وإضافته إلى قائمة الجدول الزمني. وفي ذلك الوقت، سيبدأ التلفزيون في التسجيل تلقائياً.

تسجيل البرنامج

1- اضغط على الزر "EPG" لعرض دليل البرامج الرقمي.  
2- استخدم الأزرار "UP" أو "DOWN" لتحديد القناة التي تريد التسجيل منها، ثم اضغط على الأزرار "LEFT" أو "RIGHT".  
3- اضغط على الزر الأحمر لبدء التسجيل واضغط على الزر الأخضر لبدء التذكير.  
4- في التسجيل، يعرض شريط الأدوات للإشارة إلى تقدم التسجيل. اضغط على زر "stop" لإيقاف التسجيل يدوياً.  
إذا انتهت مدة التسجيل، فسيُتوقف تلقائياً. وفي أثناء التسجيل، لا يعمل إلا الأزرار "PLAY" و"PAUSE".  
5- لمشاهدة البرامج المسجلة، انتقل إلى الـ USB /الأفلام وابحث عن المجلد PVR.

اختصارات لوحة المفاتيح لسجل الفيديو الخاص

اضغط على الزر "REC" في لوحة التحكم عن بعد لتسجيل البرنامج مباشرة.

قائمة الجدول الزمني

تمكّنك من التسجيل والتذكير في إطار زمني.

1- وفقاً للخطوات التالية، يمكنك إضافة عناصر جديدة لقائمة الجدول الزمني. اضغط على الزر الأصفر للدخول إلى القائمة الفرعية [إعداد الجدول الزمني]. واضغط على الزر "UP" أو "DOWN" لتحديد العناصر واستخدم الأزرار "LEFT" أو "RIGHT" لضبطها. اضغط على الزر "OK" لحفظ اختيارك.  
2- بعد الدخول إلى الجدول الزمني، اضغط على الزر الأحمر لحذف القائمة التي اخترتها. اضغط على الزر الأزرق لتعديل القائمة التي اخترتها.  
3- سوف يسجل التلفزيون البرنامج تلقائياً في الوقت المحدد. تظهر مطالبة خلال الثواني الأخيرة قبل التسجيل.

التنبيهات والأسئلة الشائعة

1- قد لا يتم التعرف على أجهزة التخزين المحمولة غير القياسية. يُرجى استخدام الجهاز القياسي.

2- يدعم هذا النظام تنسيقات الملفات التالية:

تنسيقات ملفات الصور: JPEG وBMP وPNG.

تنسيقات ملفات الفيديو: H.264 وMPEG4 وMPEG2 وMPEG1 وما إلى ذلك.

ملاحظة: بالنسبة لملفات الترميز، هناك أنواع عديدة من طرق الترميز غير القياسية، لذلك لا يمكن ضمان دعم هذا النظام لتنسيقات الملفات باستخدام أي طريقة ترميز.

الأسئلة الشائعة:

1- في الحالات التالية، لا يمكن لهذا النظام فك تشفير الملف ولا يمكن تشغيل الملف بشكل طبيعي:  
- إذا تجاوزت معلمات الملف، مثل بكسل الصورة ومعدل الترميز لملف الصوت والفيديو، ومعدل الإعتيان من الملف الصوتي حدود النظام -تنسيق الملف غير متطابق أو تم إتلاف الملف

**ملحوظة:** معدل الترميز لهذا النظام لا يدعم 20Mbps

2- الممنفذ الساخن: لا تقم بقطع الاتصال أثناء قراءة النظام أو نقله للبيانات لتجنب تلف النظام أو الجهاز.

3- أنتبه إلى مصدر الطاقة الخاص بالجهاز عند استخدام قرص ثابت محمول أو كاميرا رقمية.

إذا كان مصدر الطاقة غير كافٍ أو غير مستقر، فقد تواجه مشكلات أثناء التشغيل أو قد لا يعمل النظام على الإطلاق. في هذه الحالة، يرجى إعادة تشغيل الجهاز، أو فصل الجهاز وتوصيله مرة أخرى، والتأكد من أن مصدر الطاقة على حالته الطبيعية.

4- يدعم النظام أجهزة USB 1.1 وUSB 2.0 القياسية، مثل الأقراص u القياسية، ومشغلات MP3، والأقراص الصلبة المحمولة، وما إلى ذلك.

5- للحصول على جودة صوت و فيديو أفضل، يُقترح استخدام الجهاز الخارجي الذي يتوافق مع معيار USB 2.0.

6- قد يؤدي توصيل قرصين صلبين USB في وقت واحد إلى إبطاء سرعة القراءة أو مشاكل أخرى، ويُقترح توصيل قرصين أو قرص USB صلب واحد وقرص u واحد.

7- عند تشغيل الفيديو بنسبة ضغط عالية، يكون من الطبيعي ظهور الظواهر غير الطبيعية، مثل توقف الصور واستغراق القائمة وقتاً طويلاً.

8- بالنسبة لبعض أجهزة USB المزودة بالطاقة، مثل القرص الثابت بالحجم الكبير، MP4 وما إلى ذلك، يُقترح استخدامها مع الطاقة لتجنب نقص الطاقة الكهربائية.

- إذا تجاوزت معلمات الملف، مثل بكسل الصورة ومعدل الترميز لملف الصوت والفيديو، ومعدل الإعتيان من الملف الصوتي حدود النظام



**لغة النص التلفزيوني:** اضغط على زر ▲/▼ لاختيار لغة النص التلفزيوني، ثم اضغط على زر "OK" أو زر الاتجاه لليمين للدخول إلى القائمة الفرعية. اضغط على زر ▲/▼ لتحديد هذا الخيار. (الغربي، والشرقي، والروسية، وعربي، وفارسي)

**لغة الصوت:** اضغط على زر ▲/▼ لاختيار لغة الصوت، ثم اضغط على زر "OK" أو زر الاتجاه لليمين للدخول إلى القائمة الفرعية. اضغط على زر ▲/▼ / ◀/▶ لتحديد هذا الخيار. (يعمل فقط في الوضع الرقمي)

**ضعاف السمع:** اضغط على زر ▲/▼ لاختيار ضعاف السمع، ثم اضغط على زر "OK" أو زر الاتجاه لليمين لاختيار التشغيل أو إيقاف التشغيل. (هذه الخاصية متاحة فقط في الوضع الرقمي).

**نظام ملف PVR:** اضغط على زر ▲/▼ لاختيار نظام ملف PVR، ثم اضغط على زر "OK" أو زر الاتجاه لليمين للدخول إلى القائمة الفرعية. اضغط على زر ▲/▼ لتحديد خيار نظام ملف PVR، ثم اضغط على زر "OK" لتحديد هذا الخيار وسوف يختار سرعة الـ USB.

**نسبة الأبعاد:** اضغط على زر ▲/▼ لاختيار نسبة الأبعاد، ثم اضغط على زر "OK" أو زر الاتجاه لليمين للدخول إلى القائمة الفرعية. اضغط على زر ▲/▼ لتحديد تلقائي أو Zoom 1 أو 16:9 أو Zoom 2.4:3

**الشاشة الزرقاء:** اضغط على زر ▲/▼ لاختيار الشاشة الزرقاء، ثم اضغط على زر Z 4 لاختيار التشغيل / إيقاف التشغيل.

**التثبيت لأول مرة:** اضغط على زر ▲/▼ لاختيار التثبيت لأول مرة، ثم اضغط على زر "OK" لتحديد هذا الخيار.

**إعادة الضبط:** اضغط على زر ▲/▼ لاختيار إعادة الضبط، ثم اضغط على زر "OK" لتحديد هذا الخيار.

**تحديث البرنامج (USB):** تحديث البرنامج باستخدام USB مع تحميل البرنامج. البيئية: تشمل الخيارات وضع التجزئة ووضع المنزل.

**ز HDMI التلقائي** تتضمن الخيارات كل من تلقائي، ويدوي، وإيقاف.

**جاهزية مؤشر الصوت:** اضغط على زر ◀ أو "OK"، واضغط على ▶◀ لاختيار التشغيل / إيقاف التشغيل.

حلقة وضع العرض التجريبي تشمل الخيارات إيقاف التشغيل والتشغيل.

**وضع التبادل الرقمي فيليبس وسوني SPDIF:** تشمل الخيارات الوضع التلقائي والتضمين النبضي المرمز (PCM) الاستمتاع بالموسيقى: اضغط على زر ◀ أو "OK"، واضغط على ▲/▼ لاختيار التشغيل / إيقاف التشغيل.

**مفتاح تشغيل الإعلانات:** تشمل الخيارات التشغيل وإيقاف التشغيل. صوت الإعلانات: اضغط على زر ◀ أو "OK"، واضغط على ▲/▼ لاختيار التشغيل / إيقاف التشغيل.

الوقت



تتيح لك قائمة الوقت ضبط مؤقت النوم ووقت التشغيل. الساعة: يمكن لهذا الخيار تحديد الوقت الحالي.

**وقت إيقاف:** اضغط على زر "ok" لتفعيل هذا الخيار ثم اضغط على ▶/◀ للتبديل بين إيقاف التشغيل، أو مرة واحدة، أو كل يوم، أو الاثنين-الجمعة، أو الاثنين-السبت، أو الأحد، أو الأحد. إذا حددت مرة واحدة، أو كل يوم، أو الاثنين-الجمعة، أو الاثنين-السبت، أو السبت-الأحد، أو الأحد فاستخدم ▲/▼ و▶/◀ لضبط وقت إيقاف تماماً مثل قائمة إعداد الساعة.

**وقت التشغيل:** استخدم ▶/◀ لاختيار مرة واحدة، أو كل يوم، أو الاثنين-الجمعة، أو الاثنين-السبت، أو السبت-الأحد، أو الأحد. إذا حددت مرة واحدة، أو كل يوم، أو الاثنين-الجمعة، أو الاثنين-السبت، أو السبت-الأحد، أو الأحد فحينئذٍ يجب عليك تعيين فترة زمنية بعدها يتم تشغيل التلفزيون تلقائياً وفقاً للوقت المحدد أسفل هذا البند. وإبراز الوقت اضغط على "ok" للدخول ثم استخدم زر ▲/▼ / ▶/◀ لزر "ok" لتغيير الوقت.

**المنطقة الزمنية:** اختيار المنطقة الزمنية حسب مكان إقامتك. **مؤقت النوم:** تحديد فترة زمنية يتم بعدها الانتقال إلى وضع الاستعداد. استخدم زر الاتجاه لأعلى أو لأسفل لضبط الفترة. ولتعطيل هذه الخاصية اختر إيقاف التشغيل

**الاستعداد التلقائي:** تشمل الخيارات إيقاف التشغيل، و 3 ساعات، و 4 ساعات، و 5 ساعات. سوف يدخل التلفزيون في وضع الاستعداد في الوقت المحدد الذي تختاره. ملاحظة: يتم إيقاف التشغيل تلقائياً بدون إشارة خلال 10 دقائق.

**مؤقت شاشة العرض:** اختيار مؤقت شاشة العرض، وتشمل الخيارات 5 ثوانٍ، و 15 ثانية، و 30 ثانية.

الضبط

اللغة: يمكن اختيار لغة قائمة شاشة العرض. يتم تحديد اللغة الإنجليزية كلغة افتراضية للقائمة. اضغط على زر ▲/▼ / ▶/◀ لاختيار لغة شاشة العرض.

القفل

تتيح لك هذه الخاصية منع أي شخص من مشاهدة التلفزيون بشكل فعال دون إدخال كلمة المرور الصحيحة. عند اختيار تشغيل نظام القفل يتم تغيير القائمة وتشمل الخيارات قفل النظام، وتعيين كلمة المرور، وقفل القنوات، والتوجيه الأبوي، وقفل المفاتيح، ووضع الفندق.

تعيين كلمة المرور: تعيين كلمة مرور جديدة لتشغيل التلفزيون. كلمة المرور الافتراضية هي "0000".

**قفل القنوات:** قفل البرنامج الذي قمت بتعيينه. ملاحظة: إذا نسيت كلمة المرور فأدخل 4711 لإلغاء أي رمز موجودة.

التوجيه الأبوي: يحد من العمر المسموح به لمشاهدة التلفزيون. وتشمل الخيارات إيقاف التشغيل، 3، 4، 5، 6، 7، 8، 9، 10، 11، 12، 13، 14، 15، 16، 17، 18. ملاحظة: متوفر فقط في الوضع الرقمي.

**قفل المفاتيح:** عند ضبط حالة قفل المفاتيح على وضع التشغيل لا يمكنك استخدام أزرار لوحة المفاتيح.

القنوات



**التوليف التلقائي:** البحث عن القنوات النشطة وتخزينها تلقائياً.

**التوليف اليدوي (الوضع التناظري):** البحث يدوياً عن القنوات وتخزينها في الوضع التناظري الذي لم يتم تخزينه بعد التوليف التلقائي.

**التوليف اليدوي (الوضع الرقمي):** البحث يدوياً عن القنوات وتخزينها في التوليف اليدوي في الوضع الرقمي الذي لم يتم تخزينه بعد التوليف التلقائي.

**تخصيص البرامج:** حذف القناة أو نقلها أو تخطيها في الوضع الرقمي، وحذف القناة أو إعادة تسميتها أو نقلها أو تخطيها في الوضع التناظري.

**معلومات الإشارة:** اضغط على زر ▲/▼ لاختيار معلومات الإشارة، ثم اضغط على زر "OK" لرؤية المعلومات التفصيلية عن الإشارة. متوفرة فقط عند وجود إشارة في الوضع الرقمي والقمر الصناعي.

التشغيل

اتبع التعليمات في هذه الصفحة عن كيفية تشغيل التلفاز ووحدة التحكم عن بُعد قبل الانتقال إلى الصفحات التالية التي توضح كيفية اتباع إجراءات ضبط القنوات.

1- رُكب بطاريتين في وحدة التحكم عن بُعد حجم AAA.

احتياطات استخدام البطاريات:

- استخدم أنواع البطاريات المحددة فقط.
- تأكد من ضبط الأقطاب.
- لا تخطط بين البطاريات الجديدة والمستخدمة.
- لا تستخدم البطاريات القابلة لإعادة الشحن.
- لا تعرض البطاريات لحرارة مفرطة مثل أشعة الشمس أو النار، ولا تلقها في النار أو تعدد شحنها أو تحاول فتحها لأن ذلك قد يؤدي إلى حدوث تسريب أو انفجار.
- انزع البطاريات من وحدة التحكم عن بُعد إذا لم تكن ستستخدمها لفترة طويلة.

2- صل كابل الطاقة بالتلفاز أولاً ثم بمقبس الطاقة الكهربائية الرئيسية. (ملاحظة: إذا كان كابل الطاقة خارجاً من التلفاز، فيرجى توصيله بمقبس الطاقة الكهربائية الرئيسية).

يجب توصيل جهاز التلفاز بالكامل بمصدر طاقة تيار متردد فقط. يجب عدم توصيل بمصدر طاقة تيار مستمر. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسية تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

ملاحظة: الصور المستخدمة غرضها التوضيح فقط. قد يختلف مكان منفذ الإمداد بالطاقة في خلف التلفاز بحسب الطراز.

3- صل الهوائي الخارجي بمنفذ ANTENNA IN في خلف جهاز التلفاز.

يمكن استخدام منفذ الهوائي (75 UHF / VHF / كابل) لتوصيل الهوائي الخارجي أو غيره من المعدات المناسبة له.



4- عند تشغيل التلفاز، سيعمل الجهاز تلقائياً أو يدخل في وضع الاستعداد.

إذا أضاء مصباح مؤشر الطاقة، يعني ذلك أن الجهاز في وضع الاستعداد. اضغط على زر ⏻ في وحدة التحكم عن بُعد أو في الجهاز لتشغيله.

إيقاف التشغيل

- لتشغيل الجهاز في وضع الاستعداد، اضغط على زر ⏻ في وحدة التحكم عن بُعد أو في الجهاز، وسيظل الجهاز في وضع التشغيل ولكن باستهلاك منخفض للطاقة.
- لإيقاف تشغيل الجهاز، افصل مقبس الطاقة الرئيسية عن منفذ الطاقة الرئيسية. ملاحظة: في بعض الطراز، اضغط على زر الطاقة لإيقاف تشغيل الجهاز.

خصائص القائمة

تعرض التعليمات التالية كيفية الوصول إلى القائمة الرئيسية للتلفزيون وتشغيلها. يرجى ملاحظة أن بعض الخصائص قد لا تتوفر في مصادر إدخال معينة.



المصدر

عرض القائمة عن طريق الضغط على زر "Menu". اضغط على زر الاتجاه لأعلى أو لأسفل أو لليسار أو لليمين لاختيار أيقونة المصدر، واضغط على زر "ok" للدخول إلى قائمة المصدر.



1- اضغط على زر الاتجاه لأعلى أو لأسفل لاختيار المصدر المطلوب.

(ملاحظة: قد تختلف المصادر المتاحة حسب الطراز).  
2- اضغط على زر "ok" لتأكيد الاختيار.

الإعدادات

عرض القائمة عن طريق الضغط على زر "Menu". اضغط على زر الاتجاه لأعلى أو لأسفل أو لليسار أو لليمين لاختيار أيقونة الإعدادات، واضغط على زر "OK" للدخول إلى قائمة الإعدادات. اضغط على زر الاتجاه لليسار أو لليمين لاختيار: الصورة، الصوت، الوقت، الضبط، القناة واضغط على "7906" للدخول إلى قائمة وضع الفندق.

الصورة



ملاحظة: قد لا تتوفر بعض الخيارات في مصادر إشارة معينة.

خصائص القائمة

**وضع الصورة:** استخدم زر الاتجاه لليمين أو زر "OK" لإدخال الخيارات القابلة للتحديد، ثم اضغط على زر الاتجاه لأعلى أو لأسفل للتمرير من خلال إعدادات الصورة المحددة مسبقاً: شديدة الوضوح أو قياسية أو معتدلة أو المستخدم، واضغط على زر "OK" للتأكيد.

**التباين:** ضبط كثافة إضاءة الصورة، ولكن يكون ظل الصورة ثابتاً وغير قابل للتغيير.

**السطوع:** ضبط إضاءة الصورة بأكملها، وسوف يؤثر في المنطقة المظلمة من الصورة.

**اللون:** ضبط تشبع اللون بناءً على رغبتك الخاصة.

**الدرجة:** الاستخدام في تعويض اللون المتغير عند النقل في وضع N.S.T.C.

**الحدة:** ضبط تفاصيل الصورة إلى أعلى درجة.

**درجة حرارة اللون:** ضبط درجة حرارة اللون في الصورة، وتشمل الخيارات "باردة"، و"قياسية"، و"دافئة". تميل درجة حرارة اللون الباردة إلى زيادة اللون الأزرق أكثر من ألوان الصورة الأخرى، وتميل الدافئة إلى زيادة اللون الأحمر أكثر من ألوان الصورة الأخرى، وتكون القياسية ما بين الاثنين.

**تخفيض الضوضاء:** تشمل الخيارات ما يلي: إغلاق، ومنخفض، ومتوسط، وعالي، واقتراضي.

**وضع HDMI:** هذه الوظيفة متاحة فقط في وضع HDMI وتشمل الخيارات التالية: تلقائي، وفيديو، والحاسوب الشخصي.

**الضوء الأسود:** ضبط مستوى الإضاءة الخلفية الذي يؤثر في لمعان الصورة بشكل ففقط.

الصوت



تتيح لك قائمة الصوت ضبط كل خيار من الخيارات للتمتع بتجربة الاستماع.

**وضع الصوت:** تشمل الخيارات قياسي، وموسيقى، وأفلام، ورياضة، ومستخدم.

**عالي:** اضغط ◀ أو "ok" لضبط مستوى الصوت العالي.

**منخفض:** اضغط ▶ أو "ok" لضبط مستوى الصوت المنخفض.

**متعادل:** اضغط ◀ أو "OK" لتحديد هذا الخيار واستخدم ◀ لمعادلة الصوت بين السماعات اليميني واليسرى.

**مستوى الصوت التلقائي:** تشمل الخيارات إيقاف التشغيل والتشغيل.

**الصوت المحيطي:** تشمل الخيارات إيقاف التشغيل، TruSurround, SRS TruSurround XT.

## خصائص وحدة التحكم عن بُعد

تظهر معظم خصائص التلفاز في القوائم التي تظهر على الشاشة. تُستخدم وحدة التحكم عن بُعد المتوفرة مع الجهاز للتنقل بين القوائم وضبط جميع الإعدادات العامة.


- كتم الصوت** (كتم الصوت) خفض مستوى الصوت للحد الأدنى، اضغط مرة أخرى لاستعادة مستوى الصوت السابق.
- زر التشغيل/إيقاف التشغيل** (زر التشغيل/إيقاف التشغيل) (On/Off) لتشغيل التلفاز أو إيقاف تشغيله. (أزرار الأرقام) إدخال أرقام القنوات.
- 09-** اضغط زر DISCOVER للاختيار بين وضع الاستمتاع بالموسيقى، وكرة القدم، ومؤقت النوم، وخصائص بار الصوت.
- DISCOVER** تشغيل أو إغلاق دليل البرامج الإلكتروني في مصدر تلفاز DTV.
- EPG** رفع/ خفض مستوى الصوت.
- VOL +/-** الانتقال في قائمة القنوات الحالية للأعلى/ للأسفل.
- CH +/-** Info عرض معلومات الحالة
- Source** اختيار مصدر الإشارة.
- PICTURE** اختيار وضع الصورة
- SOUND** اختيار وضع الصوت
- Menu** عرض قائمة النظام
- Exit** الخروج من قائمة النظام
- ▲▼◀▶** (أزرار الاتجاه للأعلى والأسفل واليسار واليمين) اختيار العناصر المختلفة في نظام القائمة وضبط مفاتيح التحكم بالقائمة. تأكيد اختيارك.
- OK** اختيار نسبة عرض الشاشة إلى ارتفاعها (غير متوفر في وضع تشغيل USB)
- Zoom +/-** تسجيل البرامج من التلفاز الرقمي (DTV)
- REC** العودة إلى القناة السابقة في وضع التلفاز
- RETURN** عرض النص التلفزيوني
- TEXT** عرض قائمة لغة الحاشية السينمائية.
- SUBTITLE** اضغط ضغطة قصيرة لعرض قائمة القنوات، وضغطه طويلة لعرض قائمة القنوات المفضلة
- LIST** في وضع DTV، اضغط هذا الزر لعرض المعلومات عن البرنامج، واضغط عليه في المصادر الأخرى للعودة إلى DTV
- DTV** اضغط عليه في الوضع المناسب لإدخال الخاصية المناسبة.
- الزر الأحمر** اضغط عليه في الوضع المناسب لإدخال الخاصية المناسبة. (في وضع DTV، يؤدي هذا الزر وظيفة الإيقاف المؤقت، فيمكنك إيقاف البرنامج لتشغيل الخاصية أثناء المشاهدة).
- الزر الأخضر** اضغط عليه في الوضع المناسب لإدخال الخاصية المناسبة. (اضغط لتشغيل الوصف السماعي أو إغلاقه).
- الزر الأزرق** اضغط عليه في الوضع المناسب لإدخال الخاصية المناسبة. (في وضع توصيل USB أو DTV، اضغط الزر لاختيار وضع المقطع الصوتي)



## مقدمة

### المنافذ

ملاحظة: قد يختلف موقع المقاييس وأسمائها على التلفاز وفقاً لطرازه وقد لا تتوفر بعض المقاييس في طراز معينة.

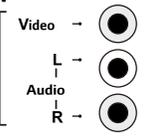- منفذ USB (مدخل)** USB →  يمكن استخدام هذا المنفذ لتوصيل جهاز USB. ملاحظة: يختلف عدد منافذ USB في التلفاز بحسب الطراز.
- منفذ SPDIF (مخرج)** SPDIF →  يرجى استخدام كابل محوري لتوصيل التلفاز بمستقبل صوتي متوافق.
- فيديو + منافذ صوت لوصلات RCA (مدخل)** AV IN  تُستخدم منافذ AV IN لتوصيل عدد من المعدات، بما فيها أجهزة تسجيل الفيديو وكاميرات الفيديو ومشغلات DVD ووحدات التحكم بالألعاب. ملاحظة: يجب توصيل مهايي كابل الصوت/الصورة ذو الألوان الثلاثة في وصلة الجاك. يختلف عدد منافذ AV IN في التلفاز بحسب الطراز.
- منفذ خروج الصوت (مخرج)** AUDIO OUT →  يرجى استخدام وصلة RCA لتوصيل التلفاز بمستقبل صوتي متوافق.
- منفذ توصيل الهوائي (مدخل)** ANTENNA IN →  يمكن استخدام هذا المنفذ قس توصيل الهوائي الخارجي أو التوصيل بشبكة تلفاز الكابل.
- منفذ HDMI (مدخل)** HDMI 1 or HDMI 2 →  يُستخدم منفذ HDMI (واجهة متعدد الوسائط عالي الوضوح) لتوصيل الحاسوب الشخصي ذو بطاقة رسومات متوافقة أو توصيل مشغلات أقراص DVD معينة، أو بجهاز رقمي متوافق لفك شفرات القمر الصناعي. يوفر هذا المنفذ وصلة رقمية غير مضغوطة تنقل بيانات الفيديو والصوت من خلال كابل موصل صغير متكامل. ملاحظة: يختلف عدد منافذ HDMI في التلفاز بحسب الطراز.

## الاحتياطات

يرجى قراءة جميع التعليمات قبل تشغيل الجهاز.  
يرجى الاحتفاظ بهذه التعليمات للرجوع إليها مستقبلاً.

## المنتج

- لا تسد فتحات التهوية في الغطاء الخلفي أو تغطيتها.
- لا تدفع أي جسم داخل الجهاز من خلال فتحات لوحة التلفاز لأنها قد تمس أجزاء ناقلة للتيار أو قد تسبب قصراً في الدائرة الكهربائية مؤدية إلى حدوث حريق أو صدمة كهربائية أو تلف للجهاز.
- لا تحاول فتحة لوحة التلفاز لأنها قد تتلف. ليس هناك أي أجزاء داخلية يمكنك إصلاحها بنفسك. ارجع إلى فني مؤهل فيما يتعلق بجميع أعمال الصيانة.
- لا تلمس سطح الشاشة باصبعك لأنها قد تخدش شاشة التلفاز أو تشوهها.
- لا تضع ضغطاً كبيراً على شاشة التلفاز، حيث قد يسبب أضراراً بالغة لها.

## الكهرباء والتوصيل

- أفضل الكهرباء عن الجهاز في الحالات التالية:
  - في حال عدم استخدام الجهاز لفترة زمنية طويلة.
  - في حال تلف سلك الكهرباء أو منفذ الطاقة/ القابس.
- اتبع التعليمات التالية لترتيب المنتج وضبط إعداداته.
- اضبط جميع عناصر التحكم المذكورة في تعليمات التشغيل لأن أي إعدادات غير سليمة لأدوات التحكم الأخرى قد تتلف الجهاز. وفي حال حدوث ذلك، أفضل الكهرباء عن الجهاز واتصل بمركز الخدمة المعتمد.
- في حال تعرض الجهاز لأي اصطدام أو في حال سقوطه مؤدياً إلى تلف اللوحة.
- حال فصل التيار عن الجهاز من خلال قابس التيار الرئيسي أو القارئة العارضة للجهاز، فإن الجهاز يظل على استعداد للتشغيل مرة أخرى في الحال.
- (حال استخدام مفتاح متعدد الأقطاب لفصل الجهاز، فإن المفتاح يظل على استعداد للتشغيل مرة أخرى في الحال).

## سلك الكهرباء وكابل الإشارة

- لا تضع أو تدرج أي شيء فوق سلك الطاقة وكابل الإشارة.
- احم سلك الطاقة وكابل الإشارة من دهسه بالأقدام.
- لا تزد الحمل على سلك الكهرباء أو منفذ الطاقة.
- لا تعرض سلك الكهرباء وكابل الإشارة لأي رطوبة.

## أضرار التلفاز

الأضرار التالية على سبيل المثال:



## زر

لتشغيل التلفزيون أو وضع الاستعداد.

## بيئة الاستخدام

- لا تضع الجهاز على عربة أو قاعدة أو طاولة مهزوزة.
- – ضع الجهاز في مكان به تهوية جيدة.
- لا تستخدم الجهاز بجانب الأماكن الرطبة والباردة. احرص على حماية الجهاز من الحرارة الزائدة.
- احفظ الجهاز بعيداً عن أشعة الشمس المباشرة.
- يجب ألا يتعرض الجهاز للتقطير أو الرش، أو ألا توضع عليه أجسام ممثلة بالسوائل، مثل المزهريات.
- لا تستخدم الجهاز بجانب الأماكن المترية.

## التنظيف

- انفض الغبار عن الجهاز بمسح الشاشة واللوحة بقطعة قماش طرية ونظيفة باستخدام منظف سائل خاص.
- لا تضغط على الشاشة بقوة عند تنظيفها.
- لا تستخدم المياه أو أي منظفات كيميائية لتنظيف الشاشة لأن ذلك قد يتلف سطح شاشة التلفاز.

## تثبيت التلفاز على الحائط

## تحذير: تتطلب هذه العملية فنيين.

- لضمان التركيب الآمن، يرجى مراعاة ملاحظات السلامة التالية:
  - تحقق من قدرة الحائط على تحمل وزن التلفاز وحامل التثبيت.
  - اتبع تعليمات التثبيت القادمة مع حامل التثبيت.
  - يجب تركيب الجهاز رأسياً على الحائط.
  - احرص على استخدام البراغي المناسبة فقط لمادة تكوين الحائط.
  - احرص على وضع كابلات التلفاز في مكان بعيد عن حركة الأقدام لتجنب التعثر فيها.

جميع تعليمات السلامة لأجهزة التلفاز الأخرى الخاصة بنا تنطبق على هذا الطراز.

## ملاحظة-

الرسومات المبينة في هذا الدليل لغرض التوضيح فقط.

تحذير: يجب عدم تعرض البطاريات لدرجات الحرارة المرتفعة مثل أشعة الشمس أو النار أو ما شابه ذلك.

الفصل الأول: مقدمة

2	الاحتياطات
2	المنتج
2	الكهرباء والتوصيل
2	سلك الكهرباء وكابل الإشارة
2	بيئة الاستخدام
2	التنظيف
2	تثبيت التلفاز على الحائط
3	أزرار التلفاز
4	المنافذ
5	خصائص وحدة التحكم عن بُعد

الفصل الثاني: التشغيل العام

6	التشغيل
6	إيقاف التشغيل
7	الاتصال بالشبكة
7	المصدر
7	الإعدادات
7	الصورة
7	الصوت
7	الوقت
8	الإعداد
9	القنوات

الفصل الثالث: الوظيفة المتقدمة

10	الوسائط المتعددة
10	الصور
10	الموسيقى
10	الأفلام
10	دليل البرامج الإلكترونية
11	دليل البرنامج
11	وظيفة PVR (تسجيل الفيديو الخاص)
11	قائمة الجدول
11	التنبهات والأسئلة الشائعة
11	التنبيهات
11	الأسئلة الشائعة

الفصل الثالث: الوظيفة المتقدمة

12	استكشاف الأخطاء وإصلاحها
12	تركيب القاعدة



الطرز: 32D3  
43D3